

Wood Flooring Tool – WS4840W6

For Use With:

3/8” – 5/8” tongue and groove flooring and Valinge type click locking systems.

Fastener:


Use 4811PN 1-3/8” 18 gauge nylon coated staples for superior hold.

Tool Inspection:


Make sure tool is disconnected from air source before making adjustments to tool.

Operation:


1. Loosen the four foot screws (Insert A) to allow guide feet to slide freely.
2. Push the two stabilizing feet up into the highest position.
3. Loosen triangle base screws (Insert B) located on each side of tool.
4. Line up the nose so that it points to the recommended position on the wood flooring. (Note: This position will likely cause the tool’s triangle base to be above the sub-floor)
5. Adjust the triangle base down by using adjustment wheel (Insert B) so that it is flat on the subfloor while aligning the nose to the proper location as specified by flooring manufacturer. (Nose should maintain approximately a 45° angle to the work surface.)
6. Tighten triangle base screws.
7. Push two stabilizing feet down until they are in full contact with the hardwood flooring surface. (Insert C)
8. Tighten foot screws.
9. Test fire tool into flooring to insure proper location.
10. ****If tool will not fire when placed in position, adjust the depth adjustment knob which will allow the safety to engage.****

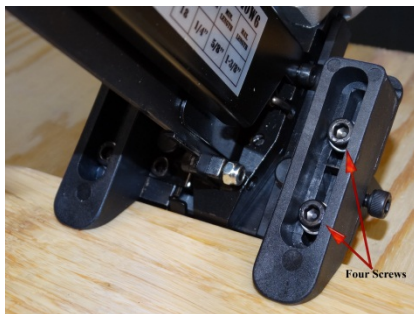

Insert A

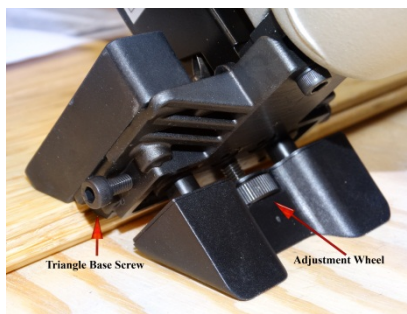

Insert B

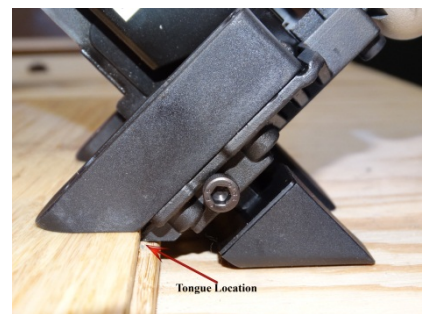

Insert C



Division of Peace Industries, Ltd.

1100 Hicks Road
Rolling Meadows, IL 60008
800-8973-2239 Fax 888-369-2588